355nm Nd:YAG q-switched picosecond laser **MB Microchip laser system**



DESCRIPTION

Our 355nm laser is based on the technology of diode pump laser module and q-switch. Nd:YAG crystal is used to manufacture 355nm laser. Crylink can provide 1.5ns, 1ns, 500ps, 550ps and 300ps 355nm microchip laser.

Our 355nm microchip laser has narrow laser pulse width. At the same time, it has high pulse repetition frequency. As a microchip laser, its size is small and its weight is light certainly. Our laser's beam quality is excellent.

As a uv laser, 355nm microchip laser plays an important role in many fields. It can be used in environment monitoring systems, 3d dental scan, laser ultrasound, laser ionization mass spectrometry and so on.


FEATURES


- Pulse energy up to 180µJ
- High polarization direction stability
- Beam mode is TEM
- · Fully sealed design, high reliability


APPLICATIONS


- Seed source
- Micromachining
- Biomedical science
- Laser ultrasonic inspection
- · Laser ionization mass spectrometry
- Laser-induced fluorescence

OUTLINE SIZE(mm)

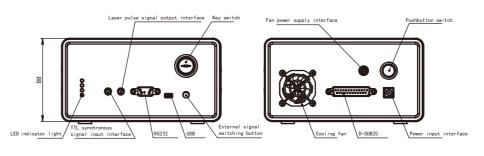

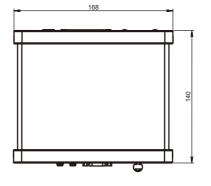

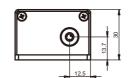

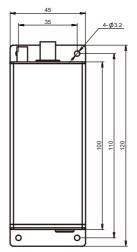


www.dpssl-crylink.com +86-25-68790685 sales@crylink.com

Building A1, No. 1 Hengyuan Road, Qixia District, Nanjing





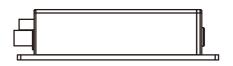





DANGEI

ASS 4 LASER RAI



S 3B LASER RADIA WHEN OPEN AVOID POSURE TO THE BEAM

PARAMETERS

Model	CL355-1KHz-30µJ-MB003
Wavelength(nm)	355
Repetition frequency (KHz)	1*
Average power(mW)	30
Output energy(uJ)	30
Pulse width (ps)	500
Power stability (8h)	±3%
Beam mode	TEM ₀₀
Full-angle divergence angle Typ. (Mrad) level @1/e ²	5
Vertical @1/e ²	5
Polarization characteristics	> 100:1
System power consumption (W)	≤25
Power input	100-240 VAC,50/60Hz
Control interface	RS232、USB
Power supply size (W×H×L, mm)	168×88×140
Laser head size (W×H×L, mm)	45×30×120
Working temperature (°C)	15-35
Storage temperature (°C)	0-60





1.*The light outlet of the laser head is side outlet. See the mechanical dimension drawing for details

2. Customized internal beam expansion function to meet the requirements of small divergence angle (less than 2mrad)



www.dpssl-crylink.com +86-25-68790685

Building A1, No. 1 Hengyuan Road, Qixia District, Nanjing



